


How to use your




POLAROID® TIMER



Attach timer to camera by screwing it into tripod socket.

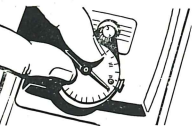

Set timer to desired development time. (One minute for most pictures—see tips packed with each picture roll. Remember: the new Polaroid Land Picture Rolls allow you to control contrast to suit your taste — use 45 seconds for softer effects, up to two minutes for extra brilliance and snap.)

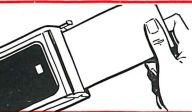

Pull film tab.



Push switch to start timer.

When buzzing stops, picture is ready for removal from camera.

A Note About Accuracy

This mechanism is designed as a "reminder" timer to help you avoid gross under- or over-development of Polaroid Land Pictures, and to let you control contrast by varying development time.

It offers the needed accuracy at the lowest possible cost. The timer can be expected to run as much as 5 to 6 seconds fast or slow, depending on age, temperature and other factors. However, this small tolerance will have no perceptible effect on your prints.

A Product of
Polaroid Corporation

F2079A

Printed in U.S.A.

How to use your



POLAROID® TIMER